

Instructions For The D14BH Heated Birdbath Dish 60Watt Insulated & Thermostatically Controlled

Please Read Carefully

Please Read Carefully

- ☉ Slip the D14BH heated birdbath dish in any 14" diameter ring. Do not place dish directly on the ground. Bath should remain above snow and water. Do not place in an existing larger bath that may accumulate water. ***Water seeping into bath from beneath will render the unit inoperable and void the warranty***
- ☉ Plug only the one (1) bath into its own 16-gauge or better grounded extension cord approved for outdoor use.
- ☉ Plug the extension cord into a GFI (ground fault interrupter) protected circuit. The heater's thermostat will then turn it on and off as the temperatures warrant.
- ☉ At the end of the winter season, either store the unit, or replace the heated dish with a non-heated dish, and store the heated dish in a cool dry place. Unheated dishes are available at your local dealer – or at our website: erva.com

A FEW FACTS

- ☉ As water evaporates from the bath it will appear as steam, especially on cold-dry days. This does not mean the water is "boiling". It is the same phenomenon as when you exhale and can see your breath.
- ☉ On warmer days the temperature of the water in the bath can get up to about 75 degrees Fahrenheit. This temperature will not harm the birds.
- ☉ Winter air is very dry, consequently water evaporates quickly. Having to refill the heated bath at least once a day is normal.

DO NOT OPEN BIRD BATH-THIS WILL INVALIDATE THE ONE YEAR WARRANTY. THERE ARE NO USER SERVICABLE PARTS INSIDE

TIPS ON MAINTAINING A WINTER BIRD BATH:

- ☉ Water is a scarce but vital resource to wildlife in the winter time, so keep your birdbath filled with water. Running it dry only wastes energy.
- ☉ The inside of the plastic dish will bow and distort slightly when the heating element is on. This is normal and will not permanently deform the bath. When the bath is dry this harmless effect will be more exaggerated.
- ☉ Rinse out the inside surface of the bath often with mild soap, water, and a cap full of bleach as this will help keep it hygienic and algae free.
- ☉ Enjoy your birds!



Please Keep Your Receipt!

If your heated dish stops working within a year after purchase please e-mail or fax a copy of your receipt with explanation. If the dish needs to be replaced we will issue a FEDEX call tag to retrieve the unit and repair or replace.

ervatool@sbcglobal.net

Fax 1-800-342-3781



Questions?
Please call 1-800-342-3782

erva[®]
Quality Metal Lawn Products

